

## WARNING



- Do not charge the battery if the charger or the battery is damaged. Doing so may cause a short circuit and fire.
- This charger is designed specifically for the Rhythm TOCBY battery. Do not attempt to charge other batteries, as this may result in explosion or personal injury.
- For indoor use only.
- Do not disassemble the charger.
- Do not strike, crack, or apply excessive force to the charger, as this may damage the casing.
- When charging, place the charger above the battery to allow proper ventilation and reduce potential hazards.



Rhythm Healthcare, LLC  
Clearwater, FL 33762

Email: [contactus@rhythmhc.com](mailto:contactus@rhythmhc.com)  
Website: [www.rhythmhc.com](http://www.rhythmhc.com)

V1: 09/03/25



ITEM# TOCSP-26

## EXTERNAL BATTERY CHARGER FOR TOC3



## FEATURES



Do not use this charger with any product or battery other than the Rhythm TOCBY series.

This charger is designed for the Rhythm TOCBY series battery and uses smart technology to ensure accurate charging.



## SPECIFICATIONS

Input Voltage: DC 24 V	Max Input Power: 90 W
Max Charge Current: 3.75 A	Quiescent Current: 22 mA
Dimensions: 154 x 80.4 x 37.5 mm	Weight: 125 g (Without Battery)

## ENVIRONMENTAL CONDITIONS

Operating Temperature	32°F to 104°F/0°C to 40°C
Operating Humidity	Less than 95%
Temperature Detection	-4°F to 193°F/-40°C to 125°C
Stored Temperature	14°F to 122°F/-10°C to 50°C
Stored Humidity	45% to 95%
Atmospheric Pressure	70 kPa to 106 kPa

## STORAGE

Store the charger in a clean, dry place at temperatures between 14°F and 122°F (-10°C to 50°C). Keep it away from corrosive substances, open flames, and heat sources.

## OPERATING INSTRUCTIONS

1. Connect the AC power supply to the charger, then plug it into a wall outlet.

 


2. Slide battery into charger.



3. When the charger is plugged in and the battery is installed correctly, the green indicator will blink to show that charging is in progress.

The battery may become slightly warm during charging. Place the charger in a well-ventilated area to allow heat to dissipate and ensure optimal charging.



4. The LED indicator will turn solid green when the battery is fully charged.



charged.



5. Press the charger button and slide the battery out.
6. Disconnect the power supply and AC cord. Store the charger and adapter in a safe place.



## INDICATOR LIGHT INFORMATION

1. When the charger detects the following conditions, the four indicator lights will flash.

- The input voltage is lower than 17 V or higher than 25 V.
- The battery temperature exceeds 149°F (65°C).
- The charger temperature exceeds 140°F (60°C)

Charging Indicator Lights	Battery
First light is blinking	0%-25%
First light is solid and second light is blinking	25%-50%
Second light is solid and third light is blinking	50%-75%
Third light is solid and fourth light is blinking	75%-99%
Fourth light is solid	100%

